

Dental Radiography Series



Exposure and Processing
for dental film radiography.



Quality diagnostic radiographs are essential in the practice of dentistry. Equally important is the need to keep exposure to a minimum for both the patient and the dental professional. To achieve quality radiographs with minimum exposure is your professional responsibility.

Like drugs, sharp instruments and other hazardous materials in the dental office, x-ray radiation must be handled carefully.

You can produce radiographs of superior quality with minimum exposure by following the five basic rules:

1. Switch to a faster film or film/screen system.

For intraoral x-rays, INSIGHT.

For extraoral x-rays, EVG, T-MAT G/RA with LANEX Regular Screens.

2. Establish correct exposure time.

Over- or underexposing Dental Film can create poor density and contrast radiographs. This results in poor quality film and unnecessary radiation to the patient.

3. Maintain an adequate darkroom.

Sensitivity of dental film demands strict attention to darkroom conditions.


4. Process films properly.

Excellent image quality requires strict attention to recommended procedures, including time and temperature processing and daily replenishment of chemicals. Always observe good safety practices: wear rubber gloves, a rubber apron and glasses when mixing, replenishing, changing or disposing of chemicals.

5. Mount and view radiographs correctly.

Viewing conditions are extremely important in interpreting radiographs.

This document describes a planned and systematic approach to exposing and processing film radiographs; such an approach is essential for effective quality assurance.

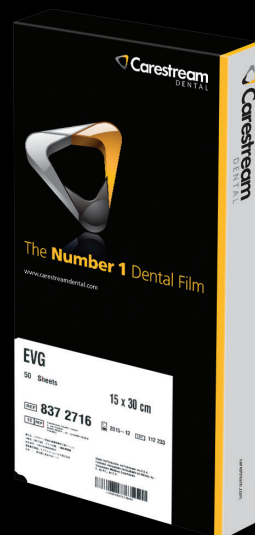

Establish Correct Exposure Time

- 4-5 Overall sources of radiation exposure and the ALARA principle
- 6-7 Consult exposure guidelines
 - 8 Record correct exposure times for each machine
Radiation and x-ray system safety and general compliance information
Manufacturer's responsibility
 - 9 Radiation protection

Maintain an Adequate Darkroom

- 10 Eliminate light leaks
Install an adequate safelight
- 11 Use quality processing chemicals
For optimum results use Carestream Dental chemistry
- 12 Regulate water temperature
Tips for automatic processors


Process Films Properly

- 12 Automatic processing recommendations for intraoral radiographs
Practice good housekeeping
- 13 Unwrap films carefully
At the end of each work day, as appropriate for your processor
Maintain automatic processors
Tips for manual processors
Manual processing recommendations for intraoral radiographs
- 14 Use correct time-temperature development
Practice good housekeeping
Unwrap and clip films carefully
Develop film properly
- 15 At the end of the each work day
Mount and view radiographs correctly
Follow good viewing practices

Establish Correct Exposure Time

Overall sources of radiation exposure and the ALARA principle

All persons are exposed to radiation in their daily lives. The National Council on Radiation Protection and Measurements, Report No. 160¹ has estimated the average annual radiation dose from all sources in the United States. The average annual total radiation exposure is estimated at 6.248 mSv. Of this total, 50% is due to naturally occurring radiation sources. These natural sources have been present since the beginning of the Earth. Medical sources of radiation account for 48% of the total average exposure with conventional radiography accounting for only 5%. That 5% includes all conventional x-ray exams done in the US including dental radiography. Dental conventional radiography accounts for a very small portion of this average annual exposure to radiation that an individual receives.

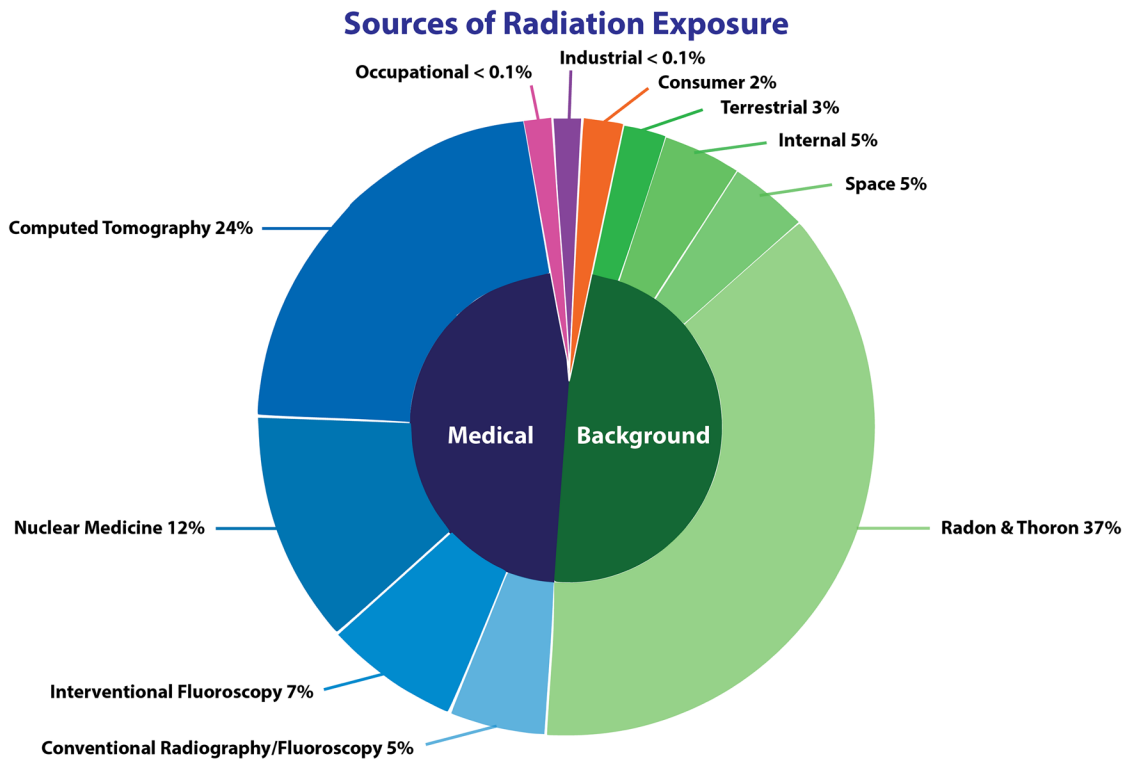

Average Annual Radiation Dose											
Sources	Radon & Thoron	Computed Tomography	Nuclear Medicine	Interventional Fluoroscopy	Space	Conventional Radiography/Fluoroscopy	Internal	Terrestrial	Consumer	Occupational	Industrial
Units											
mrem (United States)	228 mrem	147 mrem	77 mrem	43 mrem	33 mrem	33 mrem	29 mrem	21 mrem	13 mrem	0.5 mrem	0.3 mrem
mSv (International)	2.28 mSv	1.47 mSv	0.77 mSv	0.43 mSv	0.33 mSv	0.33mSv	0.29 mSv	0.21 mSv	0.13 mSv	0.005 mSv	0.003 mSv

(Source: National Council on Radiation Protection & Measurements, Report No. 160)

¹National Council on Radiation Protection and Measurements. General Considerations, NCRP Report No. 160. For more details see Report NCRP 145, 147 and 160.

The goal of dental radiography is to obtain diagnostic information while keeping the exposure to the patient and dental staff at minimum levels. While some exposure to radiation is necessary in dental practice to diagnose and treat dental maladies, it should be understood that levels of radiation exposure to patients, dental staff, and other nearby occupants should be kept to **As Low As Reasonably Achievable (ALARA)** to reduce health risks from ionizing radiation.

Any methods that can reduce patient and area radiation exposures without major difficulty, great expense or inconvenience, should be practiced. The following sections can assist the dental practitioner in minimizing exposure.

Consult exposure guidelines

Variations and inaccuracies in kilovoltage, milliamperage and timer settings have been reported for many dental x-ray machines. Therefore, for each of your x-ray machines you must establish the correct exposure time for the kilovoltage and milliamperage settings you have selected. Acceptable film density is based on recommended processing procedures, as detailed in the section "Process film properly" on page 12.

Use Tables 2 and 3 as a starting point in determining the combination of proper exposure factors that produce quality radiographs with minimum patient exposure. If your kilovoltage, milliamperage or source-image distance is not shown, you should use the chart to estimate an exposure time.

The American Dental Association (ADA) recommends the use of a shielded, open-ended position-indicating device, or PID, preferably with rectangular collimation. This technique significantly reduces the volume of tissue exposed during intraoral radiography. Circular collimation can be easily converted to rectangular through the use of an insert available from manufacturers of radiographic products.

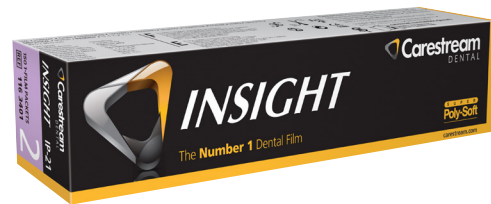


Table 2 - Exposure guidelines for INSIGHT

Factor for this Office

Exposure factors	60kV 7mA	65kV 7.5mA	65kV 8mA	70kV 7mA	70kV 8mA	80kV 10mA	kV mA	kV mA
Patient	Adult*	Adult*	Adult*	Adult*	Adult*	Adult*	Adult*	Adult*
Source-image distance	8 in	8 in	8 in	8 in	8 in	8 in	8 in	8 in
Region	Approximate exposure in seconds*							
MAXILLARY	Anterior	0.25	0.14	0.14	0.12	0.11	0.04	
	Premolar	0.33	0.19	0.18	0.16	0.14	0.06	
	Molar	0.37	0.22	0.20	0.19	0.16	0.06	
	Bitewing	0.25	0.14	0.14	0.12	0.11	0.04	
MANDIBULAR	Anterior	0.21	0.12	0.11	0.10	0.09	0.04	
	Premolar	0.23	0.13	0.12	0.11	0.10	0.04	
	Molar	0.25	0.14	0.14	0.12	0.11	0.04	
	Bitewing	0.25	0.14	0.14	0.12	0.11	0.04	

To convert to impulses, multiply exposure time by 60.

For a 12 inch cone, multiply exposure time by 2.25. For a 16 inch cone, multiply exposure time by 4.

*NOTE: For large patients, increase time by approximately 25%
 For children, reduce time approximately 30%
 For edentulous patients, reduce time 25%
 DC x-ray generators: Reduce exposure time about one-third.

Table 3 - Exposure guidelines for Ultra-speed

Factor for this Office

Exposure factors	60kV 7mA	65kV 7.5mA	65kV 8mA	70kV 7mA	70kV 8mA	80kV 10mA	kV mA	kV mA
Patient	Adult*	Adult*	Adult*	Adult*	Adult*	Adult*	Adult*	Adult*
Source-image distance	8 in	8 in	8 in	8 in	8 in	8 in	8 in	8 in
Region	Approximate exposure in seconds*							
MAXILLARY	Anterior	0.55	0.32	0.30	0.27	0.24	0.10	
	Premolar	0.73	0.43	0.40	0.37	0.32	0.13	
	Molar	0.82	0.48	0.45	0.41	0.36	0.14	
	Biteewing	0.55	0.32	0.30	0.27	0.24	0.10	
MANDIBULAR	Anterior	0.46	0.27	0.25	0.23	0.20	0.08	
	Premolar	0.50	0.29	0.28	0.25	0.22	0.09	
	Molar	0.55	0.32	0.30	0.27	0.24	0.10	
	Biteewing	0.55	0.32	0.30	0.27	0.24	0.10	

To convert to impulses, multiply exposure time by 60.

For a 12 inch cone, multiply exposure time by 2.25. For a 16 inch cone, multiply exposure time by 4.

- *NOTE: For large patients, increase time by approximately 25%
- For children, reduce time approximately 30%
- For edentulous patients, reduce time 25%
- DC x-ray generators: Reduce exposure time about one-third.



Record correct exposure times for each machine

After exposing films at the selected exposure times and processing as recommended, view the finished radiographs. If they are too light or too dark, adjust exposure times accordingly. After you have established correct exposure factors for your machine, enter them below.

Kilovoltage settings _____

Milliamperage settings _____

Impulses or seconds _____

Using:

_____ 8" position-indicating device

_____ 12" position-indicating device

_____ 16" position-indicating device

NOTES: The exposure settings may have to be altered to compensate for such factors as size of the patient, age of the patient and region of the mouth being radiographed.

The end of the position-indicating device should be positioned as close to the patient's face as possible.

Radiation and x-ray system safety and general compliance

Safety

Occupational workers associated with x-ray work must be familiar with the recommendations of the Center for Devices and Radiological Health (CDRH), the National Council on Radiation Protection (NCRP), the International Commission on Radiation Protection (ICRP), and State and local regulators.

Be sure that all personnel authorized to operate the x-ray system are familiar with the established regulations of the authorities named above. All personnel should be monitored to ensure compliance with recommended procedures.

Current sources of information include:

- NCRP Report 145: Dental X-Ray Protection
- NCRP Report 147: Structural Shielding Design for Medical Imaging Facilities

- Current recommendations of the International Committee on Radiation Protection
- State or local requirements for Radiation protection

Although exposure to high levels of x-radiation may pose a health risk, x-ray equipment does not pose any danger when properly used. Be certain all operating personnel are properly educated concerning the hazards of radiation. Persons responsible for the system must understand the safety requirements and special warnings for x-ray operation. Review this manual and the manuals for each component in the system to become aware of all safety and operation requirements.

CAUTION: Ensure exposure parameters are properly adjusted within safety limits.

Occupational Exposure limits:

Whole body: 5 rem/year

Extremity: 50 rem/year

Declared Pregnant occupational Worker: 0.5 rem/gestation period

Manufacturer's responsibility

Although this equipment incorporates protection against x-radiation other than the useful beam, practical design does not provide complete protection. Equipment design does not compel the operator or assistants to take the necessary precautions; nor does it prevent the possibility of improper use (authorized or unauthorized persons carelessly, unwisely, or unknowingly exposing themselves or others to direct or secondary radiation). Allow only authorized, properly trained personnel to operate this equipment.

Be certain that all individuals authorized to use the equipment are aware of the danger of excessive exposure to x-radiation.

Radiation protection

Because exposure to high levels of x-radiation may pose a health risk, operators must ensure that they use all available methods to reduce their radiation dose to a level that is As Low As Reasonably Achievable, the so-called ALARA philosophy. This includes protecting themselves from the primary beam as well as scattered radiation. Protection from excessive amounts of exposure is accomplished using a combination of engineering and administrative controls.

- **Shielding** – Ensure sufficient shielding is present in the primary barriers protecting operators and the general public from the primary beam as well as scatter. Primary barriers may include walls, windows, doors, and protective enclosures housing the control panels. A properly qualified professional such as a Health Physicist or Medical Physicist should be consulted to determine the proper shielding thickness, configuration and construction of the x-ray facility, based on the expected operational parameters of the x-ray system.
- **Portable Barriers and Lead Aprons** – Portable barriers and lead aprons may be needed to protect personnel from scattered radiation if operators need to be in close contact with the patient. Ensure the shielding and aprons have sufficient lead equivalence, as determined by a qualified health or medical physicist and are maintained properly for maximum benefit.
- **Distance** – It is recommended to increase distance from an x-ray unit when operating, therefore it is important to have controls outside of the operatory.
- **Procedures** – always follow the procedures of your institution to ensure proper protection.
- **Training** – only trained personnel should be permitted to operate this x-ray equipment. Most regulatory agencies require that medical diagnostic procedures only be done by properly licensed individuals. Consult your state or local agencies for more information.
- **Radiation Survey** – The exterior of the x-ray facility (i.e., outside of the primary protective barrier) and control room should be monitored periodically to ensure that dose rates meet design objectives for allowable radiation exposures. Only calibrated equipment should be used by a qualified health or medical physicist for this survey.
- **Personal Monitoring** – Occupational workers using x-ray equipment should be monitored for radiation exposure to ensure that established controls are functioning properly and procedures are being followed. A common method of monitoring is use of personal monitoring dosimeter.


Personal monitoring dosimeters use x-ray sensitive materials enclosed in a holder that incorporates metal filters of varying degrees of transparency to x-ray radiation. Even though this device only measures the radiation reaching the area of the body on which it is worn, it provides an indication of the amount of radiation received. personal monitoring dosimeters can also be used as area dosimeters on the outside perimeter of the x-ray facility and control room to verify dose rates. personal monitoring dosimeters are available from a number of distributors. Consult your institution's Radiation Safety Officer for further information.

IMPORTANT: Locate the x-ray system control panel behind protective shielding or lead screens for radiation protection to the operator, while maintaining visual and audible contact with the patient.

Maintain an adequate darkroom

A well-equipped and properly configured darkroom helps assure high-quality radiographic images. To get your darkroom into shape, be sure to do the following:

- Eliminate light leaks.
- Install proper safelighting.
- Use quality processing chemicals.
- Regulate water temperature.

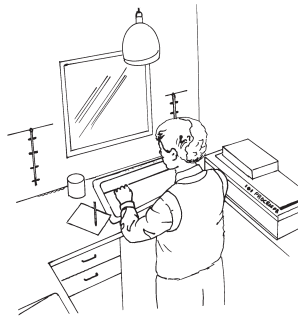

Eliminate light leaks

Light leaks cause fogging of films during processing, with substantial loss in detail and contrast.

To detect light leaks:

1. Close and lock door.
2. Turn off all lights.
3. Let your eyes adjust to the dark for at least five minutes.
4. Look for light leaks.
5. Mark light leaks with chalk.



To eliminate light leaks:

- Seal light leaks with black masking tape or weatherstripping.
- Use double doors or heavy curtains.

DARKROOM TIP

Do you have a light leak?

Is your safelight too bright?

Take this simple test in your darkroom:

With the door closed, regular lights out and safelight on, remove film from covering and place raw, unexposed film on the countertop. Place a coin on top of the film, wait two minutes and then process the film. If you see the coin outline on the processed film, your darkroom is too bright.

Install an adequate safelight

A proper safelight provides ample lighting during processing, yet it is safe for sensitive film. Safelighting that is too bright will fog films.


Conventional lamps are available in several sizes and styles to accommodate your requirements. A frosted 15W bulb is recommended. All lamps should be equipped with a GBX-2 safelight filter. The deep ruby red filter is appropriate for all intraoral and extraoral dental x-ray films.

Recommendations for safelighting:

- Place safelight at least 4' (1.2 m) from the area where film will be handled.
- Keep safelighting exposure as short as practical.

For conventional safelights:

- Always use a frosted light bulb with wattage of 15W or less.
- A GBX-2 safelight filter or ruby red safelight filter is recommended for use with both intraoral and extraoral dental films.
- The safelight filter is properly installed in the lamp when you can read the "GBX-2" on the surface of the filter.
- Check for cracked or faded filter and replace the filters as necessary.

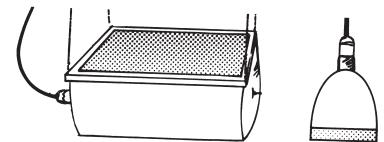

Use quality processing chemicals

Carestream Dental's processing chemicals are especially formulated in our research labs to obtain the highest-quality image when used with Carestream dental film.

We offer a selection of processing solutions to suit your needs:

Processing Solution	Description
READYMATIC Developer and Replenisher READYMATIC Fixer and Replenisher	For automatic roller-type processors
READYPRO Twin Pack	For automatic non-roller-type processors
GBX Developer and Replenisher GBX Fixer and Replenisher GBX Twin Pack	For conventional manual processing
Rapid Access Twin Pack	For rapid processing of intraoral films

To keep automatic and manual processing solutions clean, change every three to four weeks under normal conditions. Normal use is defined as 30 intraoral films per day. Heavy workloads may require more frequent changes. Developer and fixer solutions should be replenished daily. If you process an average of 30 films per day, the following recommendations are appropriate: For manual processing tanks (1 U.S. gal./3.8 L size) and for automatic roller-type processors containing one gallon (3.8 L) of each solution, approximately 8 oz. (237 mL) of replenishment is required daily for developer and fixer, even if no film is processed. Never top off chemistry with water.

Automatic roller-type processors with larger solution capacity require approximately 12 oz. (355 mL) of replenishment daily.

If you process more than 30 intraoral films per day, you should increase the amount of daily replenisher solution at the rate of 0.25 fluid oz. (7 mL) per additional film processed. Never top off chemistry with water.

CAUTION: Read and follow instructions in Safety Data Sheet (SDS), located at carestream.com/sds.

For example, 50 intraoral films per day would require that 13 oz. (385 mL) be added daily – the usual 8 oz. (237 mL) for the first 30 films, plus an additional 5 oz. (148 mL) for the additional 20 films.

TIP

Manufacturers of automatic non-roller-type processors recommend that all solutions be changed every two weeks.

While some automatic processors provide replenishment automatically, other units require operator intervention to maintain the correct solution levels and strengths.

Daily replenishment is vital to maintain quality radiographs. While it appears that you are “throwing away” chemicals, you are actually preserving the chemical activity of the remaining solution. Solution life is dependent upon:


- **Usage:** Greater use means shorter life.
- **Exposure to air:** Air causes oxidation of the chemicals and shortens effective life.
- **Temperature:** The chemicals deteriorate from extreme heat; they become inactive in extreme cold.

Each factor – use, air and temperature – works to deteriorate the activity of the solution. Fresh chemicals usually produce the best radiographs. In order to maintain that quality over several weeks, replenishment is added in small quantities each day.



Regulate water temperature

Water requirements vary among processors. Most processors need only cold water, a few need tempered water, and some need no water at all. If necessary, have some kind of temperature adjustment control for the incoming water.

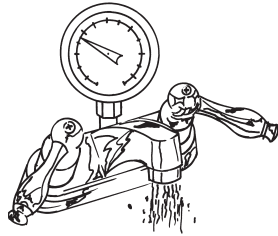

Provide for constant water flow in the wash compartment during film processing. Automatic non-roller-type processors need water changed daily to avoid stagnation.

Tips for automatic processors


The correct automatic processing equipment and proper procedures contribute to the quality of the radiograph. While automatic processing equipment will mechanically perform many of the procedures done during manual processing, follow the manufacturer's recommendations for optimal results.

Process Films Properly

Follow a set routine

At the beginning of each work day, as appropriate for your processor:

1. Check to be sure there is a sufficient amount of chemicals in both replenishment containers, or add dental developer and replenisher and/or dental fixer and replenisher directly to working solutions.
2. Turn power on.
3. Turn water on to begin stabilizing the solution temperatures.
4. In roller transport systems, insert one or more sheets of Carestream Dental's roller transport cleanup film.

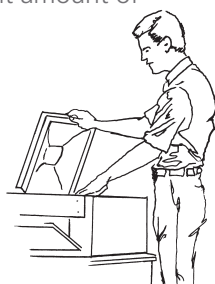

CAUTION: Read and follow instructions in Safety Data Sheet (SDS), located at carestream.com/sds.

The amount of time required to complete the processing cycle and the temperature setting for the developer varies from processor to processor and is set by the manufacturer.

Automatic processing recommendations for intraoral radiographs

In the equipment available today, the time required for the complete cycle ranges from 4 minutes at 85 °F (29.5 °C) to 6-1/2 minutes at room temperature.

Temperature and time in developer are inversely related: the higher the temperature, the shorter the time in the developer.

READYMATIC chemicals can be used in slower systems at room temperature as well as in faster systems at higher temperatures.

These values are provided only as examples to illustrate the relationship between cycle time and temperature. Follow the manufacturer's recommendations when setting up your processor.


RECOMMENDED PRODUCTS

Intra-oral film: INSIGHT and Ultra-speed

Processing chemicals: READYMATIC Developer and Replenisher
READYMATIC Fixer and Replenisher
READYMATIC Chem Pack
READYPRO Twin Pack

Practice good housekeeping

- Wipe up spilled solutions immediately.
- Clean rollers or transport system as recommended by the processor manufacturer; rinse thoroughly before reinstalling in processor as residual cleaners may contaminate fresh chemicals.
- Run Carestream Dental's roller transport cleanup film after you have turned the processor on to remove foreign matter (such as flecks of lint) that may have accumulated on the rollers during previous use. Use each sheet only once.

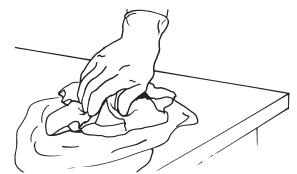


Unwrap films carefully

NOTE: Before unwrapping film, turn off the room light and turn on the safelight.

Observe these rules for unwrapping films:

- Keep hands clean and dry.
- Handle films by the edges to avoid finger marks and abrasions.
- Insert film in unit to begin processing cycle using processor manufacturer's recommendations on timing and placement.

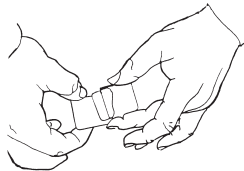

At the end of each work day, as appropriate for your processor

1. Turn off water to processing unit.
2. Turn off power to processing unit or place in standby mode.

Maintain automatic processors

Automatic processors can do an excellent job of processing films, but they require an effective quality assurance program. You should follow a set routine to assure maximum performance, and establish a time schedule for the following regular maintenance:

- Check proper solution temperature.
- Maintain proper solution levels.
- Maintain activity of solutions by replenishing daily. Never add or top off with water.
- Perform routine preventive maintenance.
- Keep working parts clean.
- Use Carestream Dental's roller transport clean-up film each day. These are single use clean up sheets.




Tips for manual processors

Process films properly

Follow a set routine

At the beginning of each work day:

1. Turn on water to begin stabilizing the solution temperatures.
2. Uncover chemicals.
3. Bring solutions to proper levels by adding and replenishing as recommended.
4. Use a film hanger to check solution levels. Solutions must completely cover the section that holds the film; do not use clips that will not be fully immersed in the solution.
5. Stir the solutions thoroughly to establish an even temperature and concentration; use separate stirring rod for each solution (plastic or stainless steel rods – never wood).

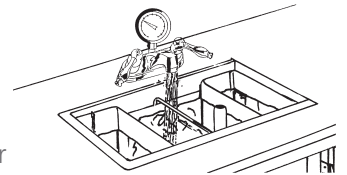

Manual processing recommendations for intraoral radiographs

Quality radiographs begin with the selection of film and processing solutions. It is important to remember that Carestream Dental products work best when used together. They have been the choice of dentists for many years.

The emulsion on Carestream Dental's film is a precise coating of dry chemicals waiting to interact with our robust processing chemicals. INSIGHT and Ultra-speed in combination with GBX Developer and Fixer were formulated to produce optimal image quality.

In manual processing, attention to good housekeeping practices and processing guidelines are essential.



Use correct time-temperature development

Table 4 - Manual development guidelines for Intraoral Radiographs

Develop		Rinse		Fix		Wash	
GBX Developer and Replenisher		Fresh running water		GBX Fixer and Replenisher		Clean running water (approx 8 volume changes per hour)	
Temperature	Time	Temperature	Time	Temperature	Time	Temperature	Time
68 °F (20 °C)	5 min	60–85 °F (15.5–29.5 °C)	30 sec (agitate continuously)	60–85 °F (15.5–29.5 °C)	2-4 min or twice the clearing time, (intermittent agitation)	60–85 °F (15.5–29.5 °C)	10 min
70 °F (21 °C)	4½ min						
72 °F (22 °C)	4 min						
76 °F (24.5 °C)	3 min						
80 °F (26.5 °C)	2½ min						

TIPS

- ❑ Check temperature of developing solution. If possible, adjust temperature to the approximate setting 68–80 °F (20–26.5 °C).
- ❑ Consult time-temperature chart for recommended developing time.
- ❑ Set timer.

Practice good housekeeping

- Wipe up spilled solutions immediately.
- Wash hangers after each use (pay particular attention to hanger clips).
- Always use clean, dry hangers.

RECOMMENDED PRODUCTS

Intra-oral film: INSIGHT and Ultra-speed


Processing chemicals: GBX Developer and Replenisher
GBX Fixer and Replenisher

Unwrap and clip films carefully

NOTE: Before unwrapping film, turn off the room light and turn on the safelight.

Observe these rules for unwrapping and clipping films:

- Keep hands clean and dry.
- Handle films by the edges to avoid finger marks and abrasions.
- Attach films securely to the hanger.
- Do not allow solutions to splash on unprocessed films.

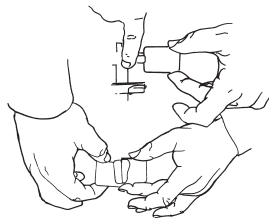

The information contained in Table 4 is extracted from publication 8666 and is available for use in your darkroom. To download it, visit carestream.com.

CAUTION: Read and follow instructions in Safety Data Sheet (SDS), located at carestream.com/sds.

Develop film properly

Develop

Prepare developer and fixer solutions according to the directions on the container. Set the timer according to the processing chart (Table 4). Immerse films (attached to a film hanger) quickly into the developer solution, dislodging air bubbles by vigorously moving the film hanger in the solution for 5 seconds. Do not agitate film during development. Remove the hanger from the developer when the timer sounds. Do not drain excess developer back into the developer tank.

Rinse

Immerse the film into the rinse tank for 30 seconds with continuous agitation.

Fix

NOTE: Do not turn on the darkroom light during fixing. Fix for 2–4 minutes with intermittent agitation (5 seconds agitation every 30 seconds). Allow excess fixer to drain back into the fixer tank before washing.

Wash

Wash films for 10 minutes in clean running water (approximately eight volume changes per hour). Do not leave the films in the wash water for extended periods

of time (over 12 hours) because damage to the image may occur.

Dry

Dry in a dust-free area at room temperature or suitable drying cabinet. The temperature of the drying area should not exceed 120 °F (49 °C).

At the end of each work day

1. Turn off water
2. Cover chemicals


Mount and view radiographs correctly

- Use an opaque mount.
- Keep hands clean and dry to avoid scratching and marring the image. Thin, light cloth gloves can be worn.
- Handle radiograph by edges.
- Use a viewbox to facilitate correct mounting.
- Label mounts properly for identification.



Follow good viewing practices

- Always use a viewbox for viewing radiographs.
- Viewbox must have uniform lighting.
- A variable light-intensity viewbox is best.
- Use cardboard template on viewbox to eliminate distracting light around the mount.

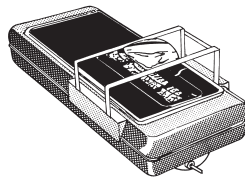

- Use a magnifying glass.
- View radiographs in subdued room lighting.

Notes

Other Publications in the Dental Radiography Series

- Guidelines for Prescribing Dental Radiographs
- Radiation Safety in Dental Radiography
- Successful Intraoral Radiography
- Successful Panoramic Radiography
- Quality Assurance in Dental Film Radiography

Would you like to know more?

For more information call **800.933.8031** or visit **carestream.com**.