

# Carestream NDT Digital Viewing Software Version 7.0

For Non-Destructive Testing

THE ALL-IN-ONE SOFTWARE SOLUTION FOR NDT

**NEW INDUSTREX  
HPX-ARC 1025  
Bendable Detector**




## NEW VERSION 7.0 FEATURES:

- Windows 11 Professional and Windows 10 Professional compatibility
- HPX-ARC 1x, 2x, 4x amplification control capability
- EDGE Display Filter optimized for HPX-ARC: HD4
- Combined DICONDE mode and Archive mode
- DICOM/DICONDE Archiving and High-volume Workflow are included

## OTHER FEATURES:

- Automatically connect your detector from the main menu

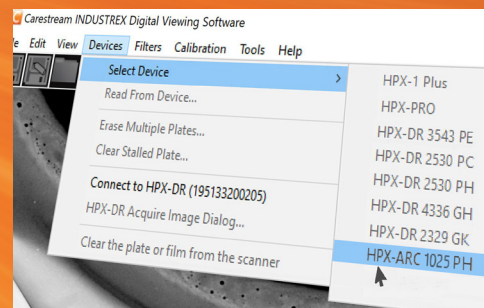

- Automatic reference object calibration tool
- Tools to quickly achieve long-term stability testing for all DR ASTM E2737 requirements and CR ASTM E2445 Type 2 phantom



**Carestream**

# Carestream NDT

INDUSTREX Digital Viewing Software Version 7.0

## ONE SOLUTION TO FIT ALL YOUR NEEDS

- Modular architecture: an all-in-one software suite that eliminates the need to purchase costly add-on modules for both CR and DR image acquisition.
- DICOM compliant: complies with industry standards for image storage, retrieval, and transmission
- For daily pixel map creation: INDUSTREX software has the ability to append to our factory map, append to an existing map, or make a new map.
- Easy Updates: software updates to the Core Software version included over the life of your capture device. Eliminates future expense of purchasing software upgrades while ensuring you have the latest features and functionality.

## NEW TOOLS FOR DR

### Satisfy ASTM E2737 for Digital Radiography Detector Systems

- Long term stability testing and the tools necessary to support it:
  - Contrast Sensitivity Tool
  - Signal Level / Signal-to-Noise Ratio Tool
  - Offset Level Image Capture Tool

## NEW TOOLS FOR CR

### Satisfy ASTM E2445 for Computed Radiography Systems

- Long Term Stability Testing
- Type 2 Phantom Resolution Calibration Tool
- Type 2 Phantom Signal-to-Noise Ratio Tool

## POWERFUL IMAGE ENHANCEMENT AND VIEWING

- Improved defect detectability with EDGE Display enhancements for both CR and DR.
- Preset EDGE Display Filters based on settings found to be most useful in practice – view images with increased detail and clarity applied automatically as needed.
- Custom EDGE Filter tool for pre-set image adjustment parameters.
- Wall thickness with variance Measurement Tool.


**CONTACT YOUR CARESTREAM NDT REPRESENTATIVE TODAY ABOUT UPDATE AND UPGRADE OPTIONS!**



[carestream.com/ndt](https://carestream.com/ndt)



## INDUSTREX NETWORK COMMUNICATIONS INCLUDED

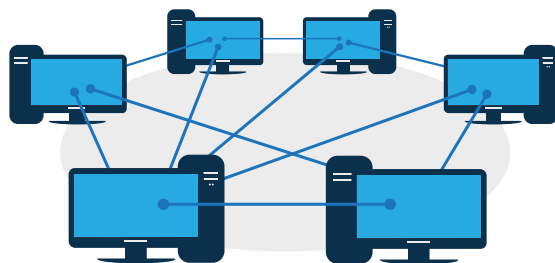


- Enable network communications and automatic image delivery.
- Set up dedicated acquisition and interpretation systems.
- Create peer-to-peer environment.
- Image queue allows for images to be queued for faster image interpretation in a few simple clicks. Quickly apply appearance settings to entire queue.
- Improved meta data configuration interface
- Detached Image List for use with multiple displays.

## STRENGTHEN YOUR BRAND WITH INDUSTREX V7.0

**CUSTOMIZE INDUSTREX, LOCK YOUR CONFIGURATION AND DISTRIBUTE YOUR SOFTWARE CUSTOMIZATIONS ACROSS YOUR FLEET OF CARESTREAM SYSTEMS.**

**INDUSTREX V7.0 ALLOWS YOU TO CHOOSE YOUR IMAGE DELIVERABLE LAYOUT AND LOOK TO ENSURE CONSISTENCY FROM SYSTEM TO SYSTEM AND CREW TO CREW.**

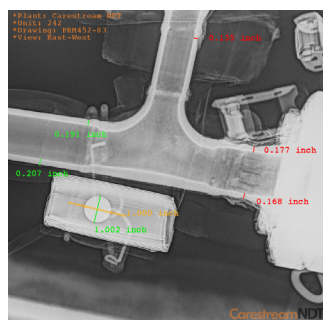

- Add your logo for unique branding
- Display consistent image data within your images
- Match your corporate fonts and colors
- Choose which tools are accessible
- Keep display filters consistent
- Easily transfer these settings across your system network

